


# How can i find out the firmware version of my reader ?

Ensure that the Ultrys software is installed on your computer. If not, you can download it from the [STid Group - Designer of contactless identification solutions](#)

## Connect your reader:


Connect your UHF reader (e.g. SNA-R41-A-BT4-3I-1) to a USB port on your computer.

## Launch Ultrys application:

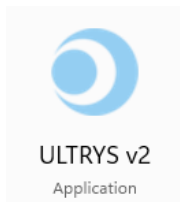

## Select your reader:

Go to the 'Settings' section and click on 'Refresh' to detect connected devices.

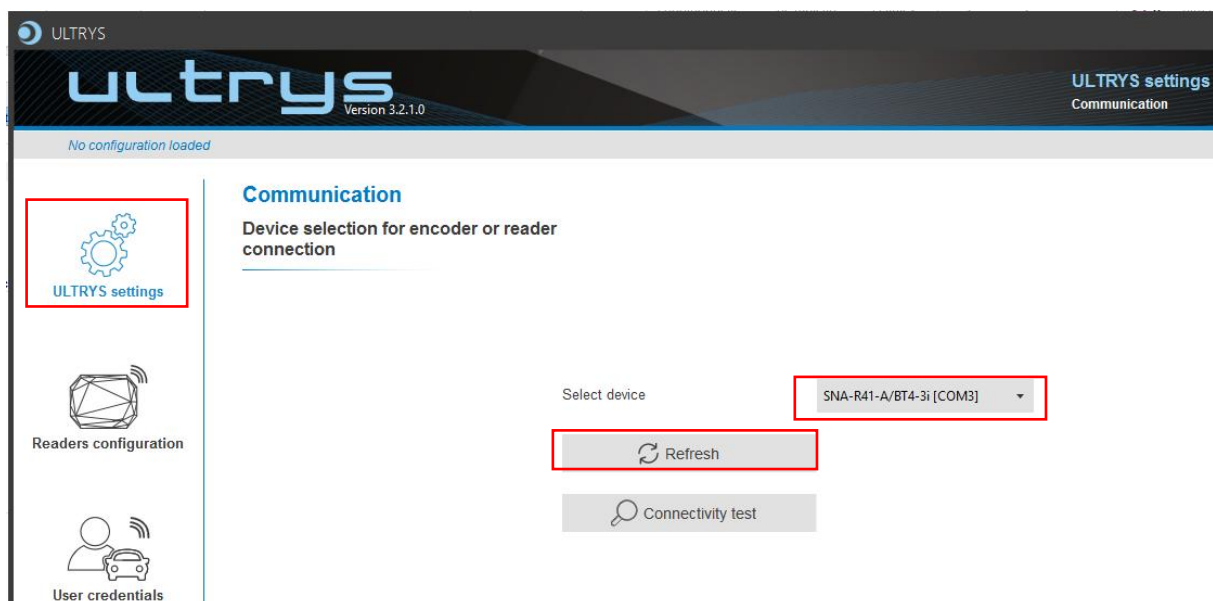

Select the reader from the drop-down list.

## Start your configuration:

Once you have selected your reader, go to readers configuration and click on '3'.

You can now perform an auto-detection and retrieve the version of your reader



The software will display the firmware version of the reader in the connectivity information (example: Firmware v18).