


How do I configure the communication port for a UHF reader or encoder ?

Ensure that the Ultrys software is installed on your computer. If not, you can download it from the [STid Group - Designer of contactless identification solutions](#)

Connect your reader:


Connect your UHF reader (e.g. SNA-R41-A-BT4-3I-1) to a USB port on your computer.

Launch Ultrys application:

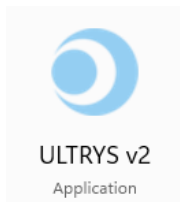

Select your reader:

Go to the 'Settings' section and click on 'Refresh' to detect connected devices.

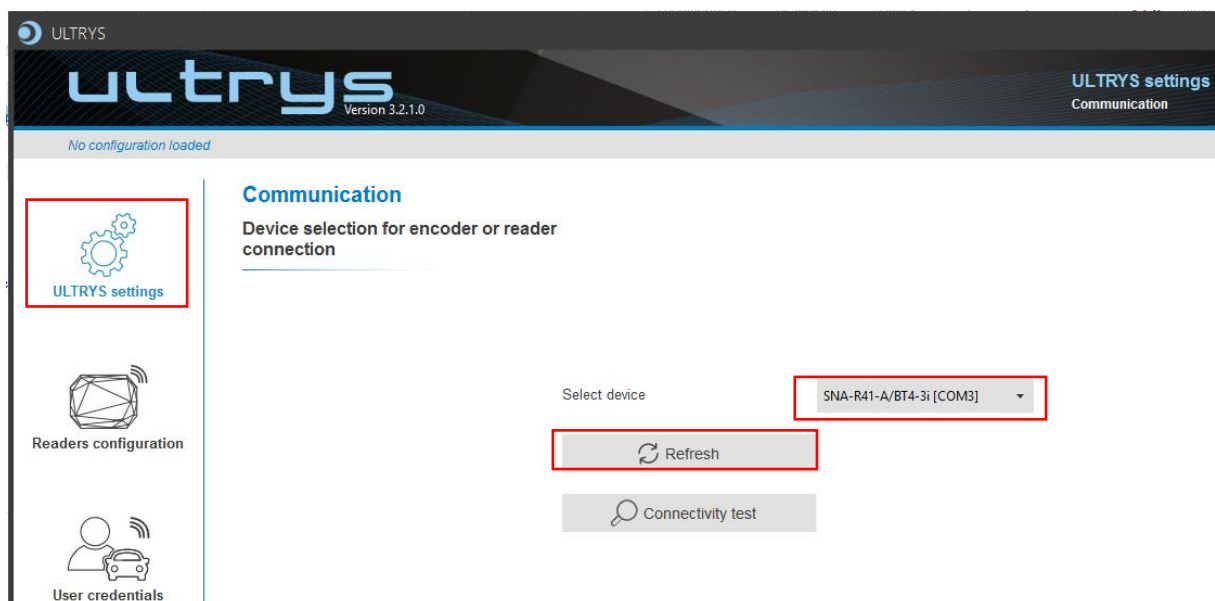

Select the reader from the drop-down list.