


How to configure my reader OSDP via File Transfer ?

Ensure that the SECard software is installed on your computer. If not, you can download it from the [STid Group - Designer of contactless identification solutions](#)

Connect the Encoder:

Attach the STid encoder (e.g., ARC-W35-G/BTI-5AA) to a USB port on your computer.

Launch SECard application:

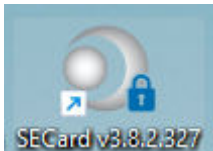

Select Access Level:

Choose "Administrator" and enter the default password: STidA.



Connect your reader with CNV-USB-485 cable

Navigate to SECard settings and select the COM port corresponding to your connected your reader..


Use the Configuration Wizard:



Select the appropriate configuration wizard for your reader model (e.g., ARC standard).

Follow the step-by-step instructions provided by the wizard to set up your reader's parameters, such as enabling or disabling options like the keyboard, biometrics, and touch screen.


Save the Configuration:

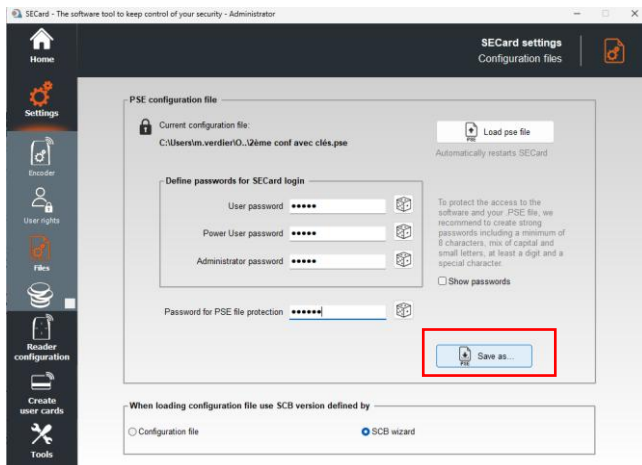

After configuring, save the settings to a .pse file for future use.

Transfer Configuration to the Reader:

To send your configuration directly to your cable reader, click on "OSDP Filetransfer" and select the good parameter for your OSDP reader:

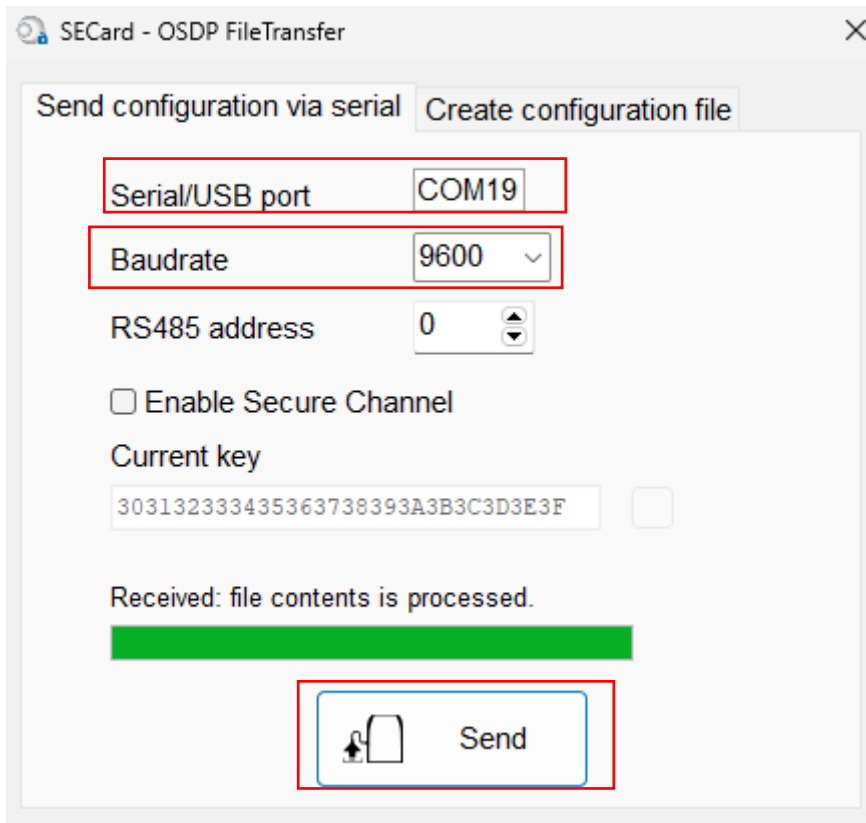

Please wait for the beeps to stop and once the message 'fileTransfer ok', your reader is configured

